


DRIVER SIDE

ALIGN TOP
CENTER HERE

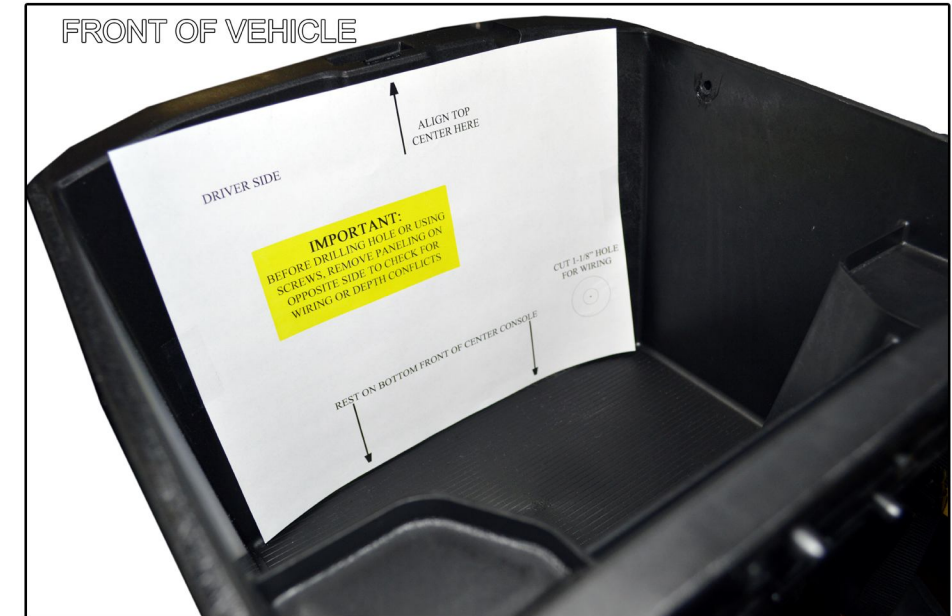

IMPORTANT:
BEFORE DRILLING HOLE OR USING
SCREWS, REMOVE PANELING ON
OPPOSITE SIDE TO CHECK FOR
WIRING OR DEPTH CONFLICTS

**THIS TEMPLATE ONLY FOR 2013+
RAM WITH CENTER CONSOLE**

CUT 1-1/8" HOLE
FOR WIRING

REST ON BOTTOM FRONT OF CENTER CONSOLE

